


# GENERAL OPEN DIAMOND BIN ASSEMBLY INSTRUCTIONS

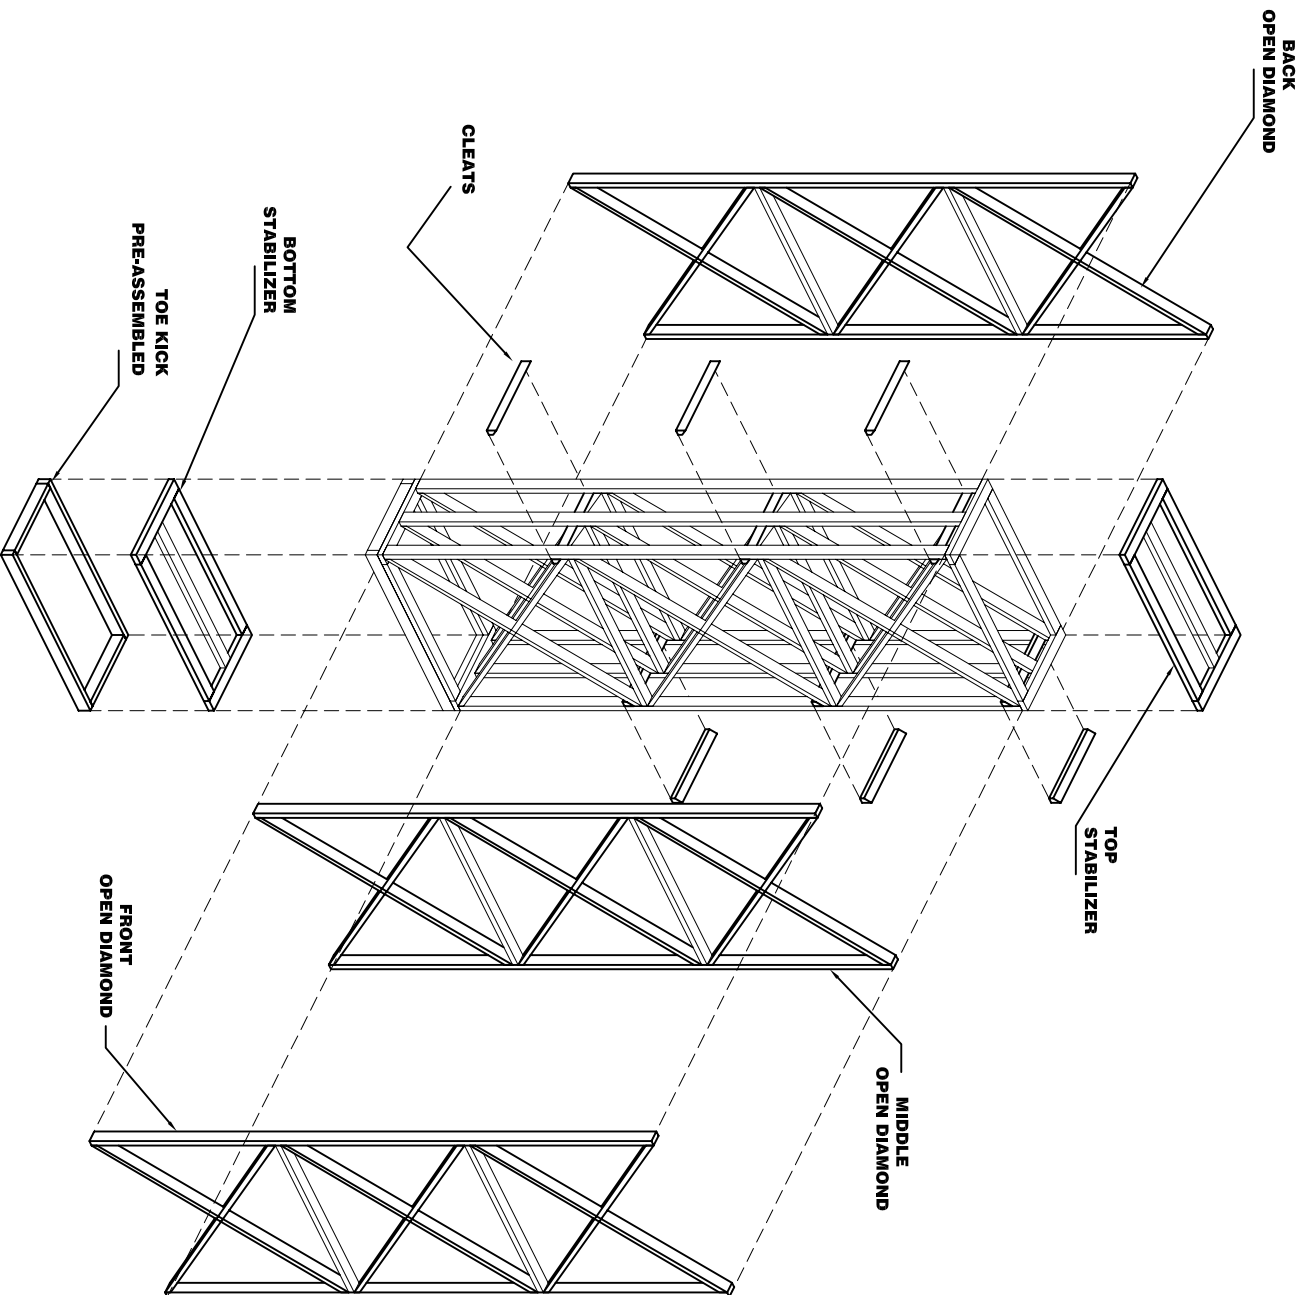

## Instructions:

1. Lay down the Back, Middle and Front Open Diamond.
2. Install slotted top & bottom stabilizers on ends of Open Diamond.
3. Install middle Open Diamonds
4. - Install Cleats
5. Position onto Toe Kick.
6. Fasten the rack to the wall.

## Note:

Use finishing nails to install along with small amounts of wood glue. Drill holes or use a pneumatic nailer.



CONTACT:

(949) 643-WINE (9463)

(866) COOL-WINE (266-5946)

www.grottocellars.com